

Manage your menu through KitchenConnect®



Welcome to KitchenConnect®, a Welbilt open cloud platform that allows you to remotely manage your Merrychef ovens, wherever you are, from any mobile or laptop device.

Within KitchenConnect® you will be able to see both operating and production data across all your appliances as well as push menus and software updates to your ovens.

KitchenConnect® also contains the Menu Creation and Management tool for Merrychef connex® ovens.

 
The platform is free of charge for the first 12 months for each oven, from when you register and activate the unit (*providing activation takes place within 12 months of purchase, or 18 months from shipment*). At the end of the free trial, there will be the option to subscribe to KitchenConnect®, which can be renewed either monthly or annually.

Contents


Navigate to menu management	2
Cookbook Library (actions)	3
Upload an existing cookbook	4
Edit a cookbook	5
Create a cookbook	8
Create a new recipe within a cookbook	10
Adding a recipe to Press & Go	12
Transfer a cookbook in KitchenConnect® to an oven(s)	14
Download an existing cookbook from KitchenConnect®	15
Sharing cookbooks from a library	15

Navigate to menu management


Log into KitchenConnect® (www.welbiltconnect.com)

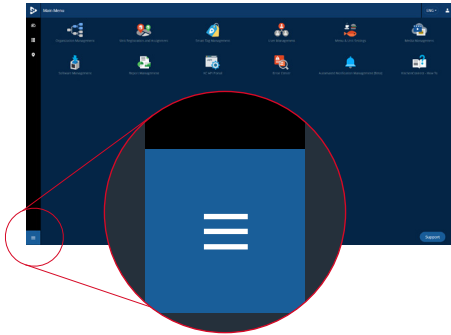

 
The Main Menu can be accessed via the 'burger bar' in the bottom left hand corner.

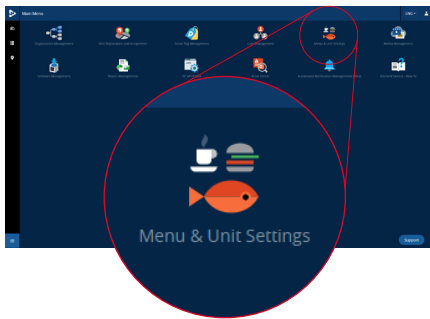

Select Menu and Unit Settings.

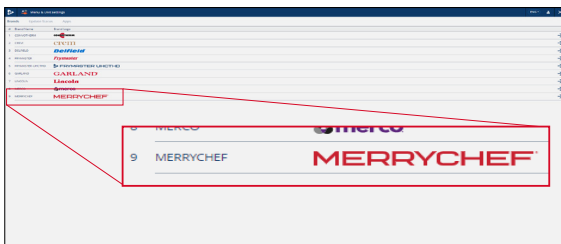 

Select Merrychef.

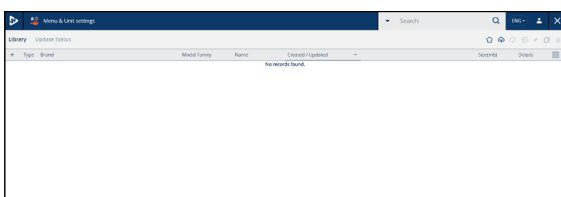 

The library is where you manage your cookbooks for your Merrychef oven(s), see next page for more information.

 
Manage your menu through KitchenConnect®

Cookbook Library (actions)


If there are no cookbooks in the library, or you have not selected a cookbook, the menu bar options are:



Select the Chef's hat 'icon' to create a cookbook (see pg 8).



 Select the 'upload' icon to use an existing cookbook (see pg 4).




When a cookbook is available, **tick the box adjacent to the cookbook to select it.**

The Menu bar options now include:



 A 'download' icon to transfer the cookbook to a PC/USB (see pg 15).



A 'transfer' icon to push the cookbook from KitchenConnect® to oven(s) (see pg 14).



An 'edit' icon to make changes to a cookbook (see pg 5).

 


A 'copy' icon, to clone a new cookbook from an existing cookbook.




A 'delete' icon to delete a cookbook.

Add information to a cookbook




 Select 'information' icon to edit or add details for the cookbook eg. Customer name.

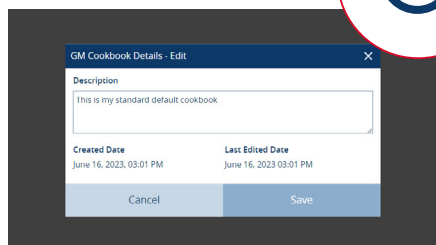


Add a description if required and select save.

 Upload an existing cookbook

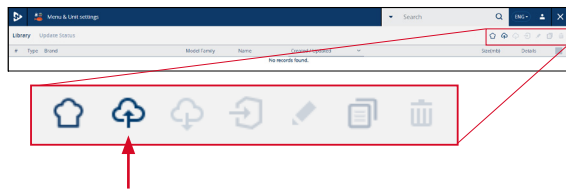


 To upload an existing cookbook to your library select 'upload' icon.

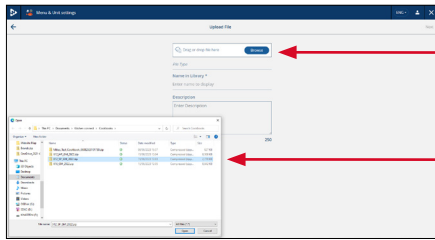

Click on browse.

 
Select the relevant file from your PC.

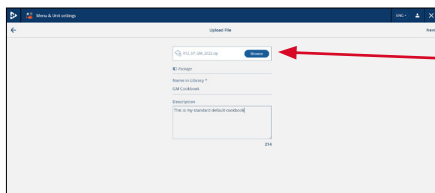

Wait for the file to upload.


Name the cookbook in the way you want it to appear in your KitchenConnect® library.

 Select Next in the top right-hand corner of the screen.

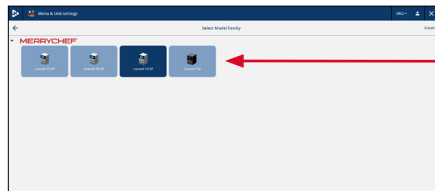


Select the relevant oven for the cookbook. The tile darkens once selected.

 
Select Finish in the top right-hand corner of the screen.



 
Wait for the cookbook to transfer to your KitchenConnect® library.




 
A green 'new' lozenge appears when the file transfer is complete.

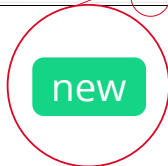

Edit a cookbook

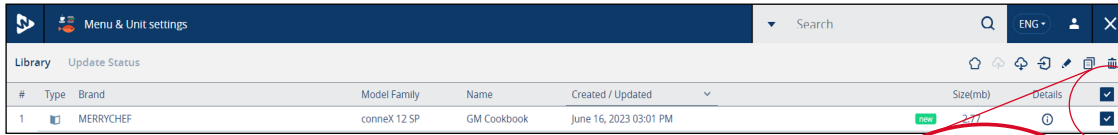 


  Tick the box adjacent to the cookbook to select the cookbook to edit.

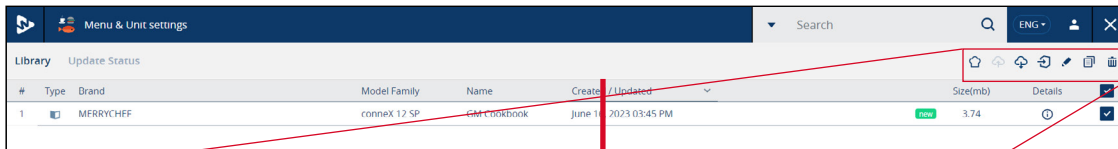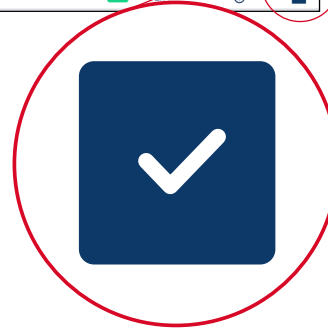


Select the 'edit' icon.

 Edit settings

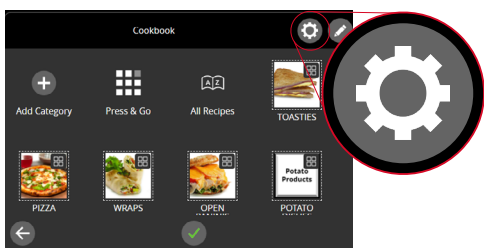

 Select the gear icon, to edit settings in the cookbook.

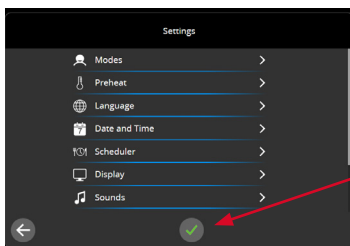


The process of changing cookbook settings is the same as the process you use on your Merrychef oven.

Select the green tick to save the settings, these will be transferred to the oven with the cookbook.

Edit a cookbook

 Edit categories

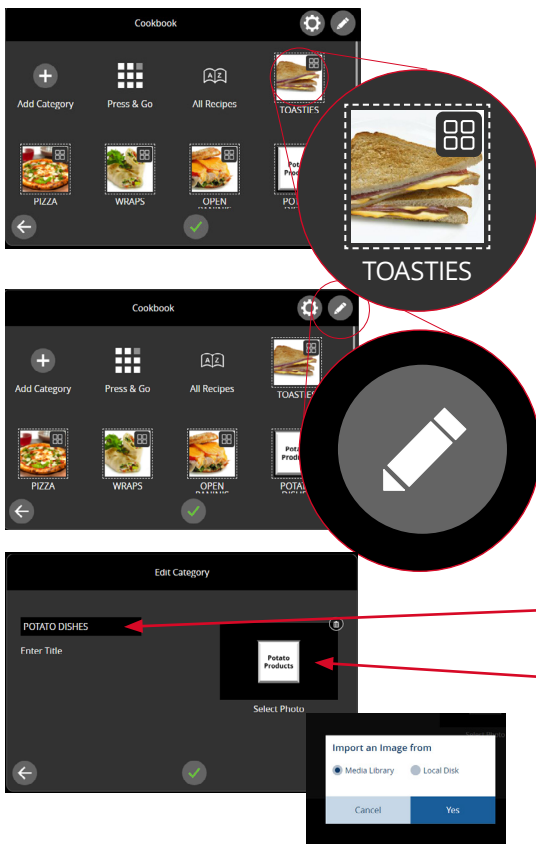

To move the location of the category select the 'squares' in the corner of the image, hold and drag.

 
To edit the category title or image, select the 'edit' icon.

Type in a title.

Select 'photo' to add or edit an image


Choose to select an image from the media library within KitchenConnect®, or upload from your own library (local disk).

Select an image from the media library within KitchenConnect® and Import

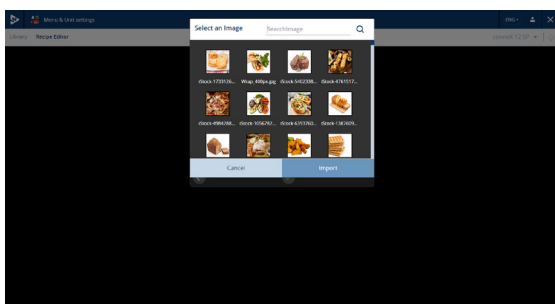


Or upload from your own library

 OR

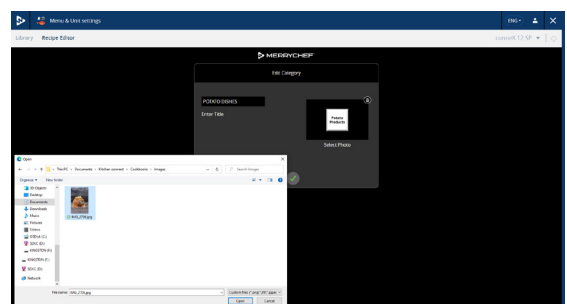


A pop up will confirm the update.

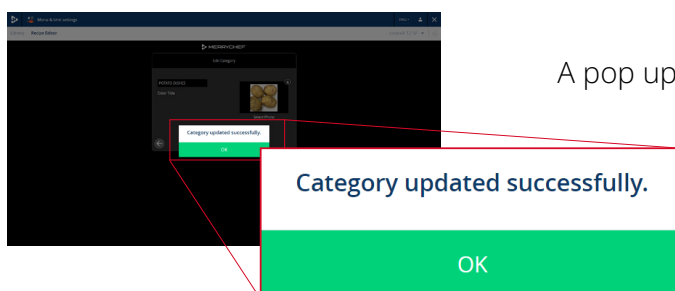 


Edit a cookbook

 
■ Edit recipes

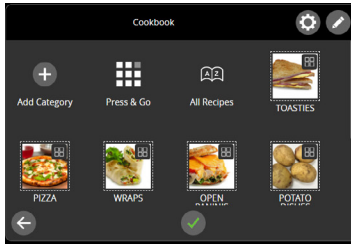

Select a category.

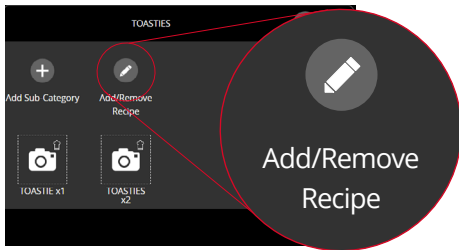 


Select add/remove recipe.

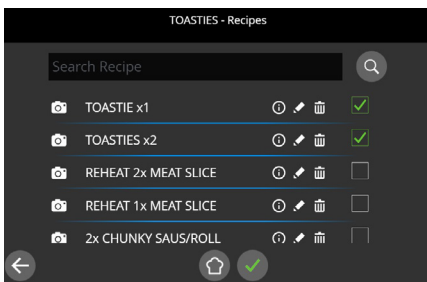 


The recipes within the selected category will be shown by a green tick.



 Select the action you want to take: 'Add information', 'edit' or 'delete' the recipe.

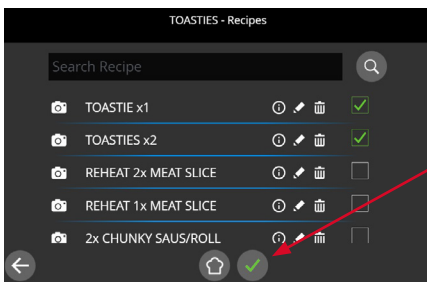

 
Select the green tick at the end of the recipe page to confirm changes.

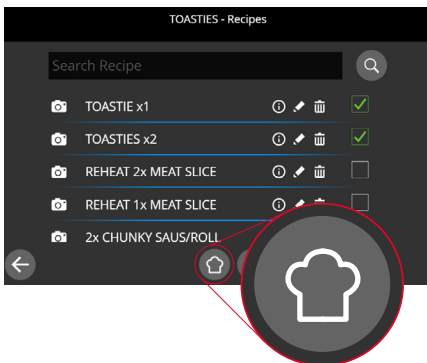


To add a new recipe into the cookbook, select 'chef's hat'.

To create a recipe, see creating new recipes p10.

 Create a cookbook

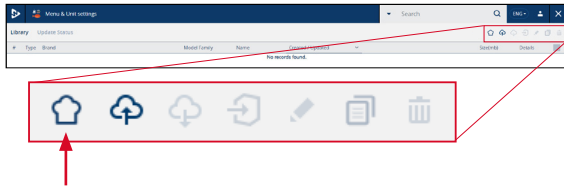

 
From the library, select the 'chef's hat'.

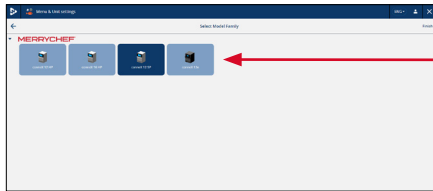


Select the relevant oven for the cookbook, the tile darkens once selected.

Select finish in the top right-hand corner of the screen.

 ■ Add your settings

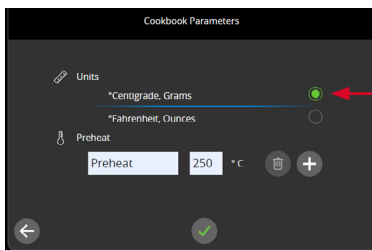


 Select 'Fahrenheit' or 'Centigrade' and required Preheat temperature.

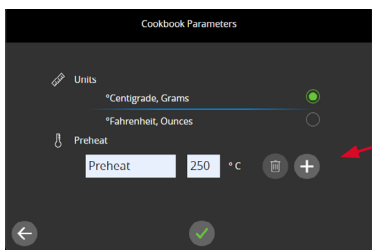


If required, select 'Add' for additional preheat temperatures.

 On completion, select the green tick.

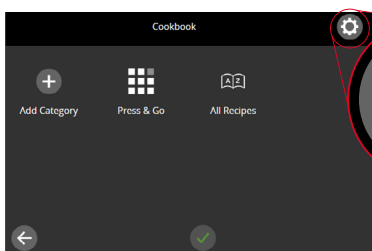

 Any other settings can be changed by selecting the 'gear' icon.

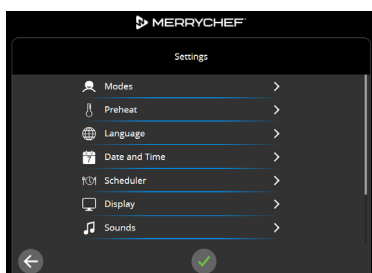


The process of changing cookbook settings is the same as the process you use on your Merrychef oven.


Select the green tick to save the settings, these will be transferred to the oven with the cookbook.

Create a cookbook

 ■ Add a category

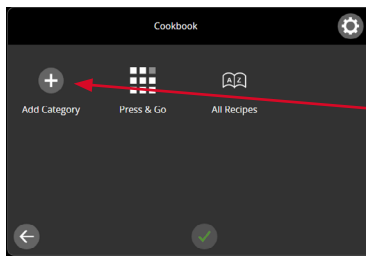


 To add categories to your cookbook, click "Add Category".

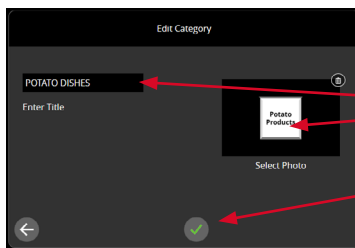

Name your category and add image (see p6).

 
On completion, select green tick.

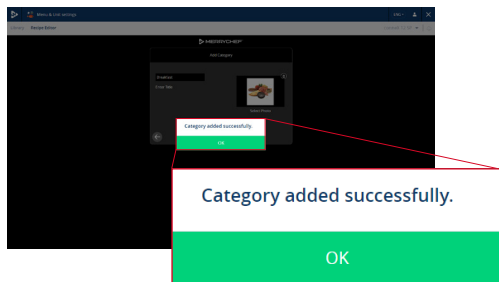


A pop up will confirm this is saved in your cookbook.

Repeat the process for additional categories.

 
■ Add a recipe or sub-category

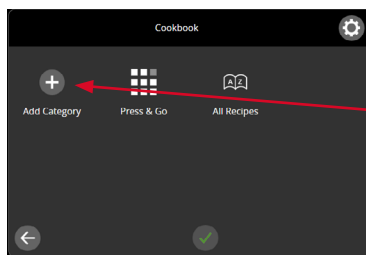

 To add categories to your cookbook, click "Add Category".

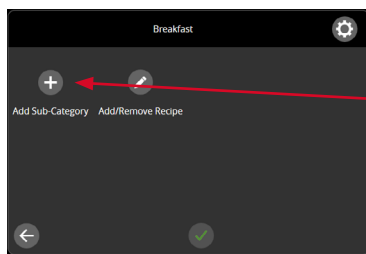

 
To add a sub-category 'add sub-category' and follow the step above.

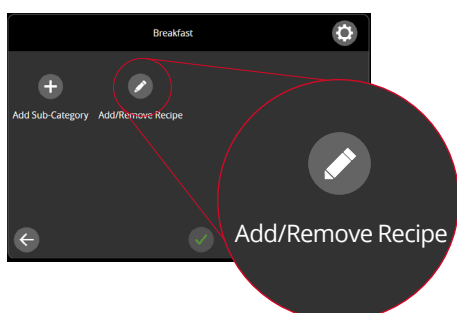


To add a recipe select 'add/remove' recipe (see page 10 for next steps)

Manage your menu through KitchenConnect®

 
Create a new recipe within a cookbook

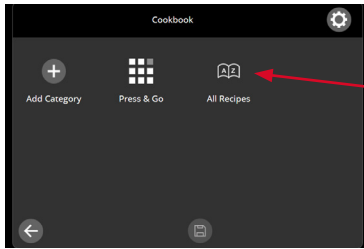

 
To create a new recipe, select 'All Recipes' within the cookbook.

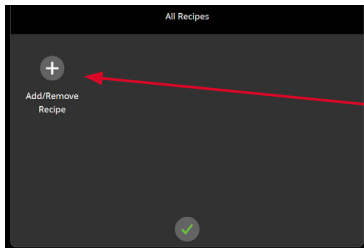

Select 'Add/Remove' recipe.

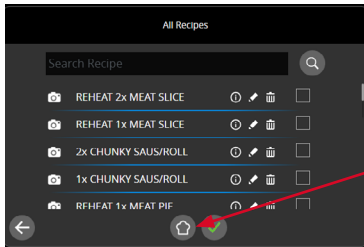 

 
Select the 'Chef's hat' at the bottom of the page.

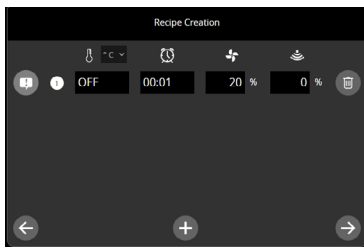


You can now input:

- 'temperature' in the box under the 'thermometer' icon
- Cook 'time' under the 'clock' icon
- 'fan' speed under the 'fan' icon
- 'microwave' power under the 'microwave' icon.

 
Add an instruction

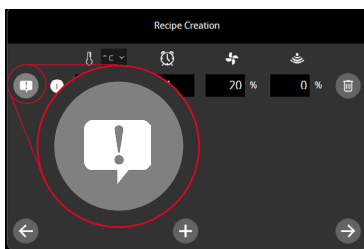

Select '+note' to add an instruction.

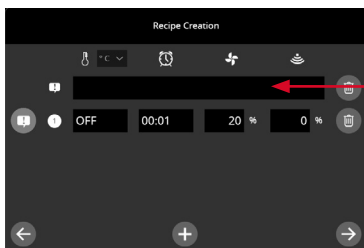 


Select the instruction bar.

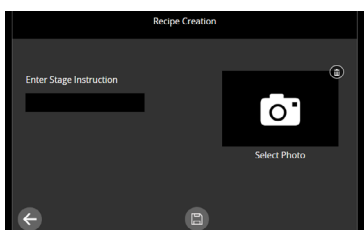 

Enter instruction and add an image if required.

Manage your menu through KitchenConnect®

 Create a new recipe within cookbook

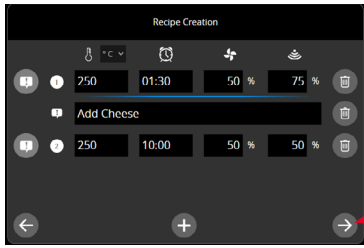


Select the '+' icon to add another stage.

Select the 'trash' icon to delete a stage.

On completion, select the 'forward arrow' in the bottom right hand corner.

 
Complete the recipe information, including the recipe title, Product state, qty/portion size and weight/each and select a photo

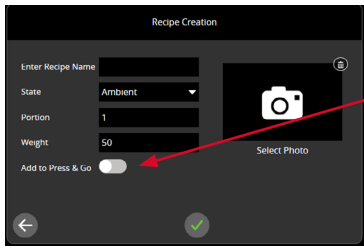

To add the recipe to Press & Go, toggle this option on.


Press & Go is an option on the 'home screen' for single recipes only.

 Select the green tick to save

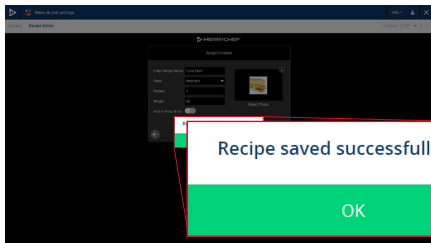


A pop up will confirm recipe saved.

 The recipe will be saved in 'All recipes' as well as the category.

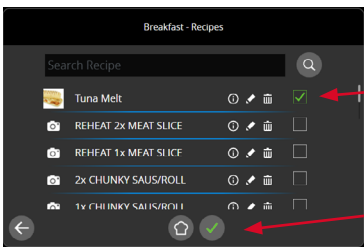


Select the green tick next to an existing recipe or the 'chef's hat' at the bottom of all recipes, to add or create more recipes.

 Select the green tick at the end of all recipes to return to the cookbook.

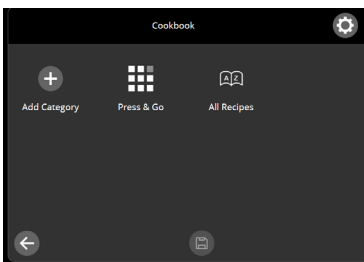


Add further categories, sub-categories or recipes to your cookbook

 On completion press the save icon.

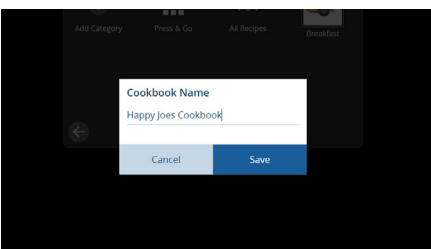

Name the cookbook and save.

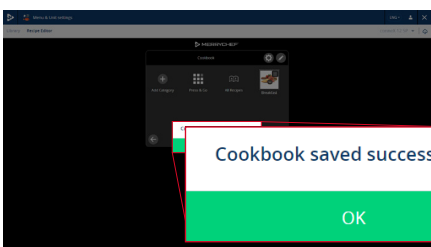 


A pop up confirms the save.


The cookbook will now appear in the library.

Adding a recipe to Press & Go

 
Press & Go is a one click option, allowing quick access to single recipes, not stored under categories.

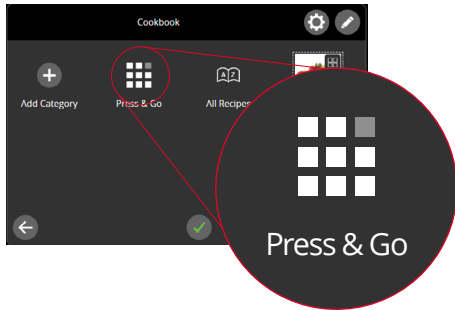

Select the Press & Go icon.

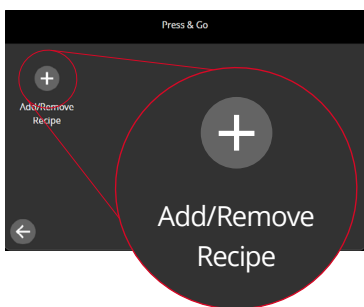 

Select Add/Remove Recipe.

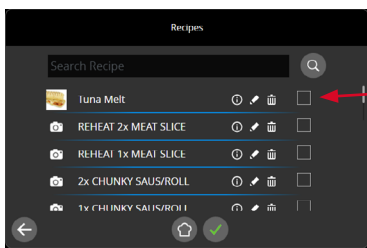 


Select the recipes you wish to add by selecting the adjacent box for each recipe.


You can also use the search function to find recipes.



 Select the green tick at the bottom of the recipes to confirm selection.

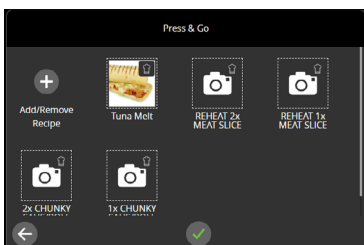


 The selected recipes are added to the Press & Go screen.

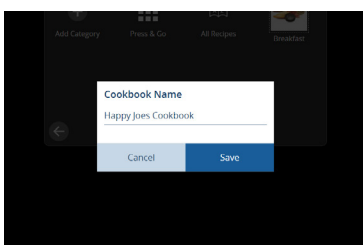


Either rename the cookbook or save as original.

 Adding a recipe to Press & Go

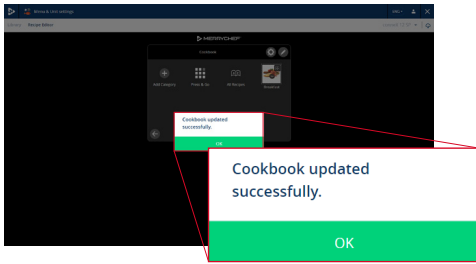


A pop up confirms the save.

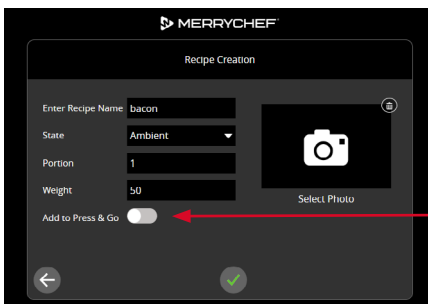 


A recipe can be immediately added to Press & Go when it is created.

By toggling on the Press & Go button before the recipe is saved.

 
Transfer a cookbook in KitchenConnect® to an oven(s)

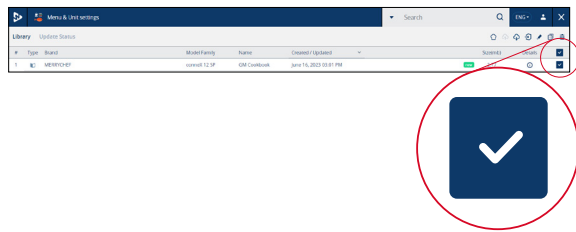

 
Tick the box adjacent to the cookbook to select the cookbook to edit.

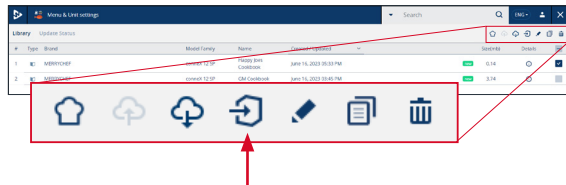

 Select the file 'transfer' icon from the menu bar.

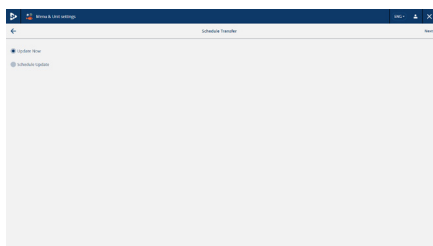

 
Select whether to update now or schedule the update for a specific date and time.

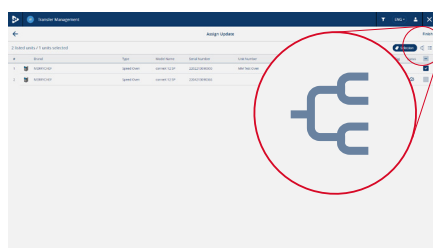

All the ovens that you have registered within KitchenConnect® will be visible and can be displayed as a list or as the organisation chart by selecting the 'chart' icon in the menu bar.


Tick each box adjacent to the oven(s) that you want to send the cookbook to.

 Select 'Finish' in the top right hand corner of the screen.

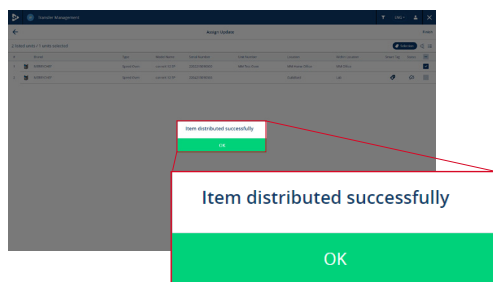


A pop up will confirm that the cookbook has been successfully sent to the oven(s).

 Select OK to go to the Update Status screen.

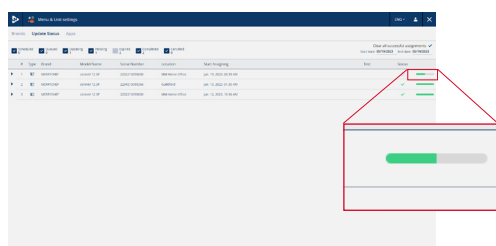


 When the green bar adjacent to the oven(s) reaches 50%, this indicates that the cookbook has been received by the oven(s).

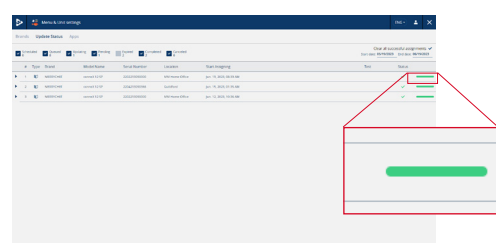


When the user accepts and installs the update, the bar will proceed to 100% to confirm the update is installed.

 
Download an existing cookbook from KitchenConnect®




Select the cookbook to download.

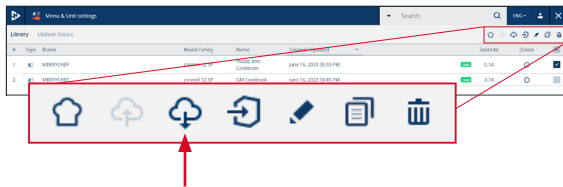 

Select the 'download' icon.

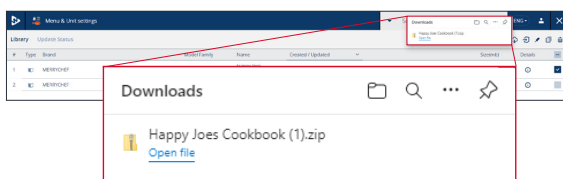 

 The cookbook should now be in your downloads folder. It can be saved, copied to USB or emailed.

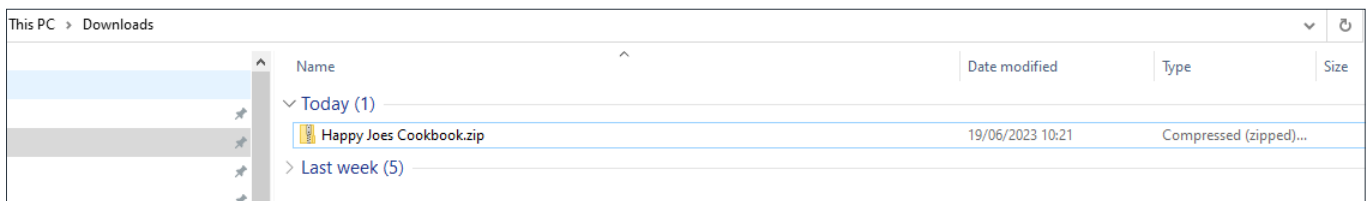

Sharing cookbooks from library

Libraries are unique to the user and the specific email address. This ensures that cookbooks are not edited or deleted in error by another user. To share a cookbook with another user download following the instructions above to a USB/PC. The cookbook can then be shared via email or USB.

The shared cookbook can then be uploaded to another users KitchenConnect® library, manually uploaded to an oven via USB or stored as a backup.

MERRYCHEF®

For further details on where to buy, how to service and for our flagship culinary support please visit www.merrychef.com

Customer satisfaction

Your satisfaction with our products is of paramount importance to us. With over 70 years experience you can be assured of a high quality, precision built appliance.